 






Original	Sustituto
 Standby/On	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 10	 0
 +10	 Guide
 +100	 Pre Ch
 Display	 Info
 Sleep	 Sleep
 A.P.S.	 Media
 Clock/Timer	 AV

Original	Sustituto
 Menu/Bluetooth Setting	 Menu
 Gt.AMP Mode	 D. Menu
 Cancel	 Exit
 Up	 Up
 Down	 Down
 >>	 >>
 I<<	 <<
 SET	 Ok
 Tuner	 TV/R
 Audio In	 3D
 Play/Pause	 Red
 Play/Pause CD	 Play
 Play/Pause iPod	 Green
 Play/Pause Bluetooth	 Pause
 Play/Pause Metronome	 Yellow
 Stop	 Stop
 FM Mode	 Format





Original	Sustituto
Play Mode	+  Shift + Play
Repeat	Text
Sound Mode	Dual
Rec/Delete	Rec
Rec Speed	Blue
Rec Mode	+  Shift + Rec
Treble+	Ch +
Treble-	Ch -
Bass+	Right
Bass-	Left
Super Woofer Volume+	+  Shift + Vol +
Super Woofer Volume-	+  Shift + Vol -
Vol+	Vol +
Vol-	Vol -
Muting	Mute

Original	Sustituto

