 
 










 
 
 
 
 
 
 
 
 


 
 
 

Original	Sustituto
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Source	 AV / Input / RDS
 0	 0
 Info	 Info / Angle
 DMP	 D.Menu / Top
 Up	 Up
 EPG	 Guide / EPG / -/--


 

 
 
 

 
 

 
 
 
 
 
 

Original	Sustituto
 Left	 Left
 Enter	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Vol +	 Vol+
 List	 Smart / List
 CH +	 CH+ / Page+
 Vol -	 Vol-
 CH -	 CH- / Page-
 Fav	 Fav / Marker / PC
 Sleep	 Sleep / Timer
 Index	 Display / Media
 Recall	 Back / Return
 Red / <<	 Red / Netflix / Search
 Red / <<	 << / Tune-







Original	Sustituto
	Power
	Mute
	1
	2
	3
	4
	5
	6
	7
	8
	9
	[≡?]/Source
	0
	[≡i]/Info
	DMP
	Up
	EPG

Original	Sustituto
	Left
	Enter
	Right
	Menu
	Down
	Exit
	Vol+
	List
	CH+
	Vol-
	CH-
	Fav / Marker / PC
	Sleep
	Index
	Back
	Red
	<<



