



Original	Sustituto
	 Mute / Dimmer
	 Power
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Info / Angle
	 0
	 AV / Input / RDS
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat

Original	Sustituto
	 Blue / Prime Video / Random
	 TV/Radio /
	 CH+ / Page+
	 Menu / Home
	 Up
	 Vol-
	 Left
	 OK
	 Right
	 Vol+
	 Down
	 Text / Goto
	 D.Menu / Top
	 CH- / Page-
	 Back / Return
	 Smart / List
	 Shift + Stop / Hold





Original	Sustituto	Original	Sustituto
Up / Hold	>>I / Preset+		
<< / F.T/L	<< / Tune-		
Play / ?	Play / Slow		
>> / Guide / Size	>> / Tune+		
>> / Guide / Size	Guide / EPG / -/--		
Down / Timer	I<< / Preset-		
Down / Timer	Display / Media		
Rec / ◇	Rec / Rec Mode		
Stop / Cancel	Stop / Hold		
Stop / Cancel	Exit / Cancel / Clear		
Pause / Subtitle / [≡i]	Pause / Step / Freeze		
Pause / Subtitle / [≡i]	Subtitle / EQ		
Zoom	Zoom / Size		
Audio / Guide	Audio / Lang I/II		
I / II	Shift + Audio / Lang I/II		
I / II	Sound / Title		
Sleep	Sleep / Timer		

