



Original	Sustituto	Original	Sustituto
	Power		Power
	Review		Smart / List
	Left/ <</-		Left
	Left/ <</-		<< / Preset-
	Right/>> /+		Right
	Right/>> /+		>> / Preset+
	Tv/VCR		AV / Input / RDS
	--:--		Exit / Cancel / Clear
	Audio		Audio / Lang I/II
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	X		Back / Return
	9		9
	0		0
	Timer		Sleep / Timer
	PR+		CH+ / Page+
	Start Debut +		Green / APP / Repeat
	Start Debut -		Red / Netflix / Search
	Stop Fin +		Blue / Prime Video / Random
	PR-		CH- / Page-
	Stop Fin -		Yellow / YouTube / Repeat
	Date-		Vol-
	Date+		Vol+
	Prog		TV/Radio /
	<<		<< / Tune-
	30 Sec/>>		Display / Media
	Timer/?		Shift + Sleep / Timer
	Play		Play / Slow





Original		Sustituto		Original		Sustituto	
	'/'		Guide / EPG / -/--				
	>>		>> / Tune+				
	Rec		Rec / Rec Mode				
	Stop		Stop / Hold				
	Pause		Pause / Step / Freeze				
	Menu		Menu / Home				
	OK		OK				
	Up		Up				
	Down		Down				
	Tv Vol-		Shift + Vol-				
	Tv Vol+		Shift + Vol+				
	Tv PR-		Shift + CH- /				
	Tv PR+		Shift + CH+ /				
	Tv/VCR Tv		Shift + AV / Input / RDS				
	Power Tv		Shift + Power				
	Mute Tv		Shift + Mute / Dimmer				

