

 



 



 









 







 



 

 









 



















 









 

























Original	Sustituto	Original	Sustituto
 Power DVD	 Power	 Cancel	 Exit / Cancel / Clear
 Stop	 Stop / Hold	 Zoom	 Zoom / Size
 Pause	 Pause / Step / Freeze	 Subtitle	 Subtitle / EQ
 Play	 Play / Slow	 Angle	 Info / Angle
 <<	 << / Tune-	 3D Phonic	 Audio / Lang I/II
 >>	 >> / Tune+	 Strobe	 AV / Input / RDS
 <<	 << / Preset-	 Digest	 Picture / Format
 >>	 >> / Preset+	 1	 1
 Menu	 Menu / Home	 2	 2
 Return	 Back / Return	 3	 3
 On Screen	 Display / Media	 4	 4
 Theater Position	 Smart / List	 5	 5
 Enter	 OK	 6	 6
 Up	 Up	 7	 7
 Down	 Down	 8	 8
 Right	 Right	 9	 9
 Left	 Left	 0	 0





Original	Sustituto
 10	 Guide / EPG / -/--
 +10	 Fav / Marker / PC
 Open/Close	 Eject / Surround
 Resume	 Text / Goto
 Power Tv	 Shift + Power
 Tv/Video	 TV/Radio /
 Tv CH+	 CH+ / Page+
 Tv CH-	 CH- / Page-
 Tv Vol+	 Vol+
 Tv Vol-	 Vol-
 Enter Tv	 Shift + OK
 1 Tv	 Shift + 1
 2 Tv	 Shift + 2
 3 Tv	 Shift + 3
 4 Tv	 Shift + 4
 5 Tv	 Shift + 5
 6 Tv	 Shift + 6

Original	Sustituto
 7 Tv	 Shift + 7
 8 Tv	 Shift + 8
 9 Tv	 Shift + 9
 0 Tv	 Shift + 0
 10 Tv	 Shift + Guide / EPG / -/--

