





 
 
 
 
 

 




 


 

 


 
 
 

 
 
 


 
 

 
 





 
 








 




 


 


 
 


 

 

 


 




Original		Sustituto		Original		Sustituto	
	Standby		Power		P+		Ch +
	Source		AV		P-		Ch -
	1		1		Menu		Menu
	2		2		Guide		Guide
	3		3		Tools		Options
	4		4		Info		Info
	5		5		Return / Back		Back
	6		6		Exit		Exit
	7		7		OK		Ok
	8		8		Up		Up
	9		9		Down		Down
	0		0		Right		Right
	TTX/MIX		Text		Left		Left
	PRE-CH		Pre Ch		Smart Hub		Smart
	Mute		Mute		Red		Red
	Vol+		Vol +		Green		Green
	Vol-		Vol -		Yellow		Yellow





Original	Sustituto	Original	Sustituto
 Blue	 Blue		
 Play	 Play		
 Pause	 Pause		
 Stop	 Stop		
 Rec	 Rec		
 >>	 >>		
 >>	 >>		
 <<	 <<		
 <<	 <<		
 AD/Subt.	 Subt		
 3D	 3D		
 History	 Format		
 Support	 Dual		
 Camera	 Shift + Smart		
 D	 TV/R		
 CH List	 List		

