























 















 
 



Original	Sustituto
	 Mute / Dimmer
	 Power
	 Back / Return
	 Audio / Lang I/II
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 0
	 Guide / EPG / -/--
	 Fav / Marker / PC
	 Menu / Home

Original	Sustituto
	 Info / Angle
	 Left
	 Up
	 CH+ / Page+
	 Right
	 Down
	 CH- / Page-
	 Vol-
	 Vol+
	 Red / Netflix / Search
	 Sound / Title
	 Green / APP / Repeat
	 Picture / Format
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 TV/Radio /
	 AV / Input / RDS





	Original	Sustituto		Original	Sustituto
	[≡]	GOTO TEXT			
	[ /≡]	SHIFT + GOTO TEXT			
	[≡o]	TIMER SLEEP			
	[≡+]	HOLD			
	[≡x]	OPT-TOOLS SETUP			
	[≡◆]	SIZE ZOOM			
	[≡?]	LIST SMART			
	[≡i]	MEDIA DISPLAY			

