



Original	Sustituto
Tuner	+ Shift + 6
Sleep	Sleep / Timer
Power Receiver	Power
Video	+ Shift + 4
DVD	+ Shift + 2
AUX	+ Shift + 7
Game/F.AUX	Smart / List
1	1
2	2
3	3
Input Mode	AV / Input / RDS
4	4
5	5
6	6
Setup	Setup / OPT /
7	7
8	8

Original	Sustituto
9	9
Tone	+ Shift + Audio / Lang I/II
+10	Guide / EPG / -/-
0	0
Dimmer	+ Shift + Mute / Dimmer
Sound	Sound / Title
Listen Mode	Display / Media
Active EQ	+ Shift + Display / Media
Multi Control	Down
Multi Control Up	Up
Vol+	Vol+
Vol-	Vol-
Play/Pause/Ban	Play / Slow
Stop/Auto/Mono	Stop / Hold
Mute	Mute / Dimmer
I<<< P.Call	I<<< / Preset-
P.Call >>I	>>I / Preset+





Original	Sustituto
 Power DVD	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 Setup	 Setup / OPT /
 7	 7
 8	 8
 9	 9
 +10	 Guide / EPG / -/--
 0	 0
 Dimmer	 Mute / Dimmer
 Top Menu	 D.Menu / Top
 Up	 Up
 Menu	 Menu / Home

Original	Sustituto
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 Return	 Back / Return
 On Screen	 Display / Media
 Pause	 Pause / Step / Freeze
 Play/Pause	 Play / Slow
 Stop	 Stop / Hold
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 <<	 << / Tune-
 >>	 >> / Tune+
 RDS Disp./Disc	 AV / Input / RDS
 PTY Disc Skip	 Shift + D.Menu / Top Menu
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ





	Original	Sustituto	Original	Sustituto
	ANGLE	ANGLE INFO		
	Repeat	APP REPEAT		

