



Original	Sustituto	Original	Sustituto
	1		1
	2		2
	3		3
	Power		Power
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	+10		Guide / EPG / -/--
	Loudness/Down		CH- / Page-
	Up Page/PTY		CH+ / Page+
	Set Up		Setup / OPT /
	Sound		Sound / Title
	Listen Mode		Smart / List
	RDS Display		Display / Media
	Left P.Call/ </>		I<< / Preset-
	Up Multi Control		Up
	Right P.Call		>>I / Preset+
	Down Multi		Down
	<< Tuning		<< / Tune-
	>> Tuning		>> / Tune+
	Play Reverse		Left
	Play/Pause / Band		Play / Slow
	Play/Pause / Band		Pause / Step / Freeze
	Bass Boost		Audio / Lang I/II
	A/B / +100 / Disc Skip		Fav / Marker / PC
	Auto / Stop		Stop / Hold
	DVD		Shift + 2
	AUX		Shift + 7
	CD/DVD		Shift + 3
	Tuner		Shift + 6





	Original	Sustituto
	MD/Tape	Shift + 5
	Video 1	Shift + 4
	Video 2	Shift + 8
	Active EQ	Subtitle / EQ
	Tone	Eject / Surround
	Mute	Mute / Dimmer
	Vol-	Vol-
	Vol+	Vol+

	Original	Sustituto





Original	Sustituto
DVD Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
+10	Guide / EPG / -/--
Menu	Menu / Home
OSD	Display / Media
Return	Back / Return
Top Menu	D.Menu / Top
Left/ <<	<< / Preset-

Original	Sustituto
Up	Up
Right/>>>	>> / Preset+
Down	Down
<< Tuning	<< / Tune-
>> Tuning	>> / Tune+
Enter	OK
Play/Pause	Play / Slow
Stop	Stop / Hold
Pause	Pause / Step / Freeze

