



 
 
 



 

 
 



 

 

 
 








 





Original	Sustituto
 Display	 Display / Media
 Power	 Power
 DVD/CD	 Shift + 2
 DVD/CD	 Shift + 3
 Tuner Band	 Shift + 6
 SAT	 Shift + 0
 Input Mode /	 Blue / Prime Video / Random
 Input Mode /	 AV / Input / RDS
 VCR	 Shift + 4
 Cable	 Shift + 5
 TV	 Shift + 1
 Aux Front	 Shift + 7
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5

Original	Sustituto
 6	 6
 7	 7
 8	 8
 9	 9
 PGM	 TV/Radio /
 0	 0
 +10 / Clear	 Guide / EPG / -/-
 +10 / Clear	 Exit / Cancel / Clear
 Volume+	 Vol+
 Audio / Set	 Audio / Lang I/II
 CH+ / Repeat	 Green / APP / Repeat
 CH+ / Repeat	 CH+ / Page+
 Volume-	 Vol-
 Mute	 Mute / Dimmer
 CH- / A.B	 Yellow / YouTube / Repeat
 CH- / A.B	 CH- / Page-
 Up	 Up





Original	Sustituto
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	

Original	Sustituto
