



 







 

 
 

 


















 



 



 



 



 

 

 















Original	Sustituto	Original	Sustituto
 Power	 Power	 Up	 Up
 EPG	 Guide / EPG / -/--	 Display	 Display / Media
 REP	 TV/Radio /	 Left	 Left
 Mute	 Mute / Dimmer	 OK	 OK
 Rec List	 Shift + Rec / Rec Mode	 Right	 Right
 CH List	 Smart / List	 Menu	 Menu / Home
 Subtitle	 Subtitle / EQ	 Down	 Down
 Eject	 Eject / Surround	 Exit	 Exit / Cancel / Clear
 Rec	 Rec / Rec Mode	 1	 1
 Stop	 Stop / Hold	 2	 2
 I<<	 I<< / Preset-	 3	 3
 >>I	 >>I / Preset+	 4	 4
 Pause	 Pause / Step / Freeze	 5	 5
 Play	 Play / Slow	 6	 6
 <<	 << / Tune-	 7	 7
 >>	 >> / Tune+	 8	 8
 Source	 AV / Input / RDS	 9	 9





Original	Sustituto
0	0
↶	RETURN BACK
FAV	PC FAV MARKER
▲ VOL	+ VOL
PICTURE	FORMAT PICTURE
NICAM/A2	LANG / I / II AUDIO
▲ CH	+ CH PAGE
▼ VOL	- VOL
SOUND	TITLE SOUND
SLEEP	TIMER SLEEP
▼ CH	- CH PAGE
Red	NETFLIX SEARCH
Green	APP REPEAT
Yellow	YouTube REPEAT A-B
SCREEN	Prime Video RANDOM
TV/TXT SETUP	OPT-TOOLS SETUP
CANCEL D-MENU	TOP MENU D.MENU

Original	Sustituto
REVEAL TITLE	SHIFT + TITLE SOUND
PRO	SHIFT + MEDIA DISPLAY
HOLD LAN	SHIFT + LIST SMART
SIZE A-B	SIZE ZOOM
SUBPAGE GOTO	GOTO TEXT
INDEX SLOW	ANGLE INFO



Cancel Menu