



 





 

 

 









 

 





 






Original	Sustituto
 Power	 Power
 Picture Size	 Eject
 Picture Mode	 Format
 Sound Select	 Dual
 PIP On	 Smart
 PIP Size	 Shift + Eject
 PIP CH+	 Shift + Ch +
 PIP CH-	 Shift + Ch -
 PIP Source	 Shift + AV
 PIP Swap	 Shift + Back
 Up / CH+	 Up
 Up / CH+	 Ch +
 Down / CH-	 Down
 Down / CH-	 Ch -
 Right / Vol+	 Right
 Right / Vol+	 Vol +
 Left / Vol-	 Left

Original	Sustituto
 Left / Vol-	 Vol -
 OK	 Ok
 Menu	 Menu
 Source	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Still	 Pause
 Prev CH	 Back
 Mute	 Mute



