







 

 

 

 



 

 





 
 
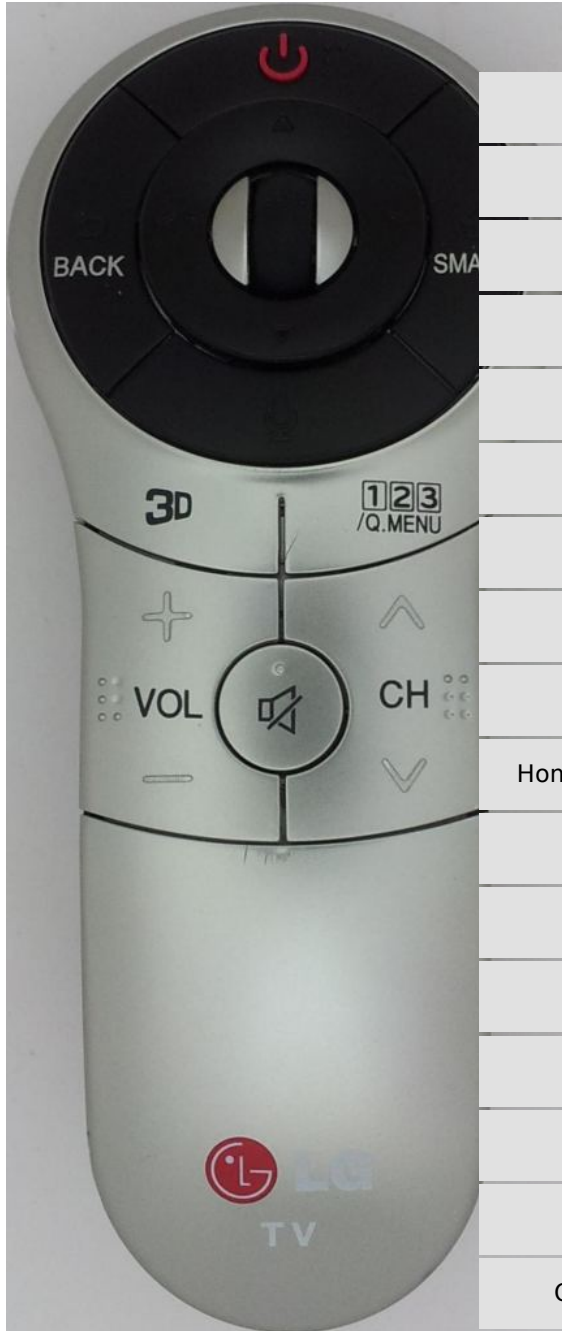






















Original	Sustituto	Original	Sustituto
	Power		Power
	Mute		Mute / Dimmer
	Vol+		Vol+
	Vol-		Vol-
	CH+		CH+ / Page+
	CH-		CH- / Page-
	Back		Back / Return
	Smart		Smart / List
	Up		Up
	Down		Down
	Left		Left
	Right		Right
	OK		OK
	3D		3





Original	Sustituto	Original	Sustituto
Power		Power	Power
OK		OK	OK
Up		Up	Up
Down		Down	Down
Right		Right	Right
Left		Left	Left
Back		Back / Return	Back / Return
Vol +		Vol+	Vol+
Vol -		Vol-	Vol-
Home / Smart		Menu / Home	Menu / Home
3D		Shift + 3	Shift + 3
Mute		Mute / Dimmer	Mute / Dimmer
P +		CH+ / Page+	CH+ / Page+
P -		CH- / Page-	CH- / Page-
Ratio		Picture / Format	Picture / Format
List		Smart / List	Smart / List
Q.Menu		D.Menu / Top	D.Menu / Top









 


 

Original	Sustituto	Original	Sustituto
Subtitle		Subtitle / EQ	Subtitle / EQ
Settings		Setup / OPT /	Setup / OPT /
>>		>>I / Preset+	>>I / Preset+
>>		>> / Tune+	>> / Tune+
Play		Play / Slow	Play / Slow
AD / PIP		Sound / Title	Sound / Title
<<		I<< / Preset-	I<< / Preset-
<<		<< / Tune-	<< / Tune-
Rec		Rec / Rec Mode	Rec / Rec Mode
Pause		Pause / Step / Freeze	Pause / Step / Freeze
Text		Text / Goto	Text / Goto
FAV		Fav / Marker / PC	Fav / Marker / PC
Exit		Exit / Cancel / Clear	Exit / Cancel / Clear
Input		AV / Input / RDS	AV / Input / RDS
Blue		Blue / Prime Video / Random	Blue / Prime Video / Random
Yellow		Yellow / YouTube / Repeat	Yellow / YouTube / Repeat
Stop / Live TV		Stop / Hold	Stop / Hold



Menu



Original	Sustituto
AV Mode	 +  Shift + AV / Input / RDS
Green	 Green / APP / Repeat
Red	 Red / Netflix / Search
0	 0
AD	 Audio / Lang I/II
TV / PC	 +  Shift + Fav / Marker / PC
Search	 +  Shift + Red / Netflix /
App	 +  Shift + Green / APP /
TV / Radio	 TV/Radio /
Guide	 Guide / EPG / -/--
Info	 Info / Angle
Recent	 Sleep / Timer
9	 9
8	 8
7	 7
Live Menu	 Display / Media
6	 6

Original	Sustituto
5	 5
Q.View	 +  Shift + Display / Media
4	 4
Live Zoom	 Zoom / Size
3	 3
2	 2
1	 1
T.Opt	 +  Shift + Setup / OPT / Tools
Energy Saving	 Eject / Surround
My APPS	 +  Shift + Smart / List

