



 



 

 



 
 
 

 

 
 



 

 



 





Original	Sustituto
 Power	 Power
 Open/Close	 Eject / Surround
 Power Tv	 Shift + Power
 AV Tv	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 PR+ Tv	 CH+ / Page+
 4	 4
 5	 5
 6	 6
 PR- Tv	 CH- / Page-
 7	 7
 8	 8
 9	 9
 Vol+ Tv	 Vol+
 0	 0

Original	Sustituto
 Mute Tv	 Mute / Dimmer
 Vol- Tv	 Vol-
 <<	 << / Tune-
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Pause/Step	 Pause / Step / Freeze
 Play	 Play / Slow
 Stop	 Stop / Hold
 Display	 Display / Media
 Up	 Up
 Setup	 Setup / OPT /
 Left	 Left
 Enter	 OK
 Right	 Right
 Disc Menu	 D.Menu / Top
 Down	 Down



 

 





 





 













 

 

















 

 

 





 



 

 

 



Original	Sustituto
Return	Back / Return
O))/Audio	Audio / Lang I/II
[...] / Subtitle	Subtitle / EQ
Camera / Angle	Info / Angle
Zoom	Zoom / Size
Title	Sound / Title
Program	TV/Radio /
Marker	Fav / Marker / PC
Search	Red / Netflix / Search
Clear	Exit / Cancel / Clear
Repeat	Green / APP / Repeat
A-B	Yellow / YouTube / Repeat
Random	Blue / Prime Video / Random

Original	Sustituto









Original	Sustituto
 Power	 Power
 Eject	 Eject / Surround
 AV	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Tv/VCR	 TV/Radio /
 0	 0
 <<	 << / Tune-
 >>	 >> / Tune+
 Pause/Step	 Pause / Step / Freeze

Original	Sustituto
 Play	 Play / Slow
 Stop	 Stop / Hold
 CLK/CNT	 Display / Media
 Up	 Up
 PR/TRK+	 CH+ / Page+
 i	 Info / Angle
 Left	 Left
 Enter	 OK
 Right	 Right
 PR/TRK-	 CH- / Page-
 Down	 Down
 O)))/Audio	 Audio / Lang I/II
 Rec/ITR	 Rec / Rec Mode
 Lock	 Back / Return
 Search	 Red / Netflix / Search
 Clear	 Exit / Cancel / Clear
 Repeat	 Green / APP / Repeat





Original	Sustituto	Original	Sustituto
	LP		Picture / Format
	CM Skip		Smart / List

