 

 
 
 

 

 

 

 
 
 
 
 
 
 
 
 

 

 


 
 






 
 

 
 
 

 

 
 


 
 






 
 






 

 
 
 
 





 






 


 

 

 









Original	Sustituto	Original	Sustituto
 Power	 Power	 >>/Forward	 >>
 DVD	 Guide	 I<< Skip	 I<<
 VCR	 Pre Ch	 >>I Skip	 >>I
 Eject/Open/Close	 Eject	 Pause/Step	 Pause
 1	 1	 Play	 Play
 2	 2	 Stop	 Stop
 3	 3	 Rec	 Rec
 4	 4	 Home	 Smart
 5	 5	 Disc Menu List	 Menu
 6	 6	 Display	 Info
 7	 7	 Return	 Back
 8	 8	 PR/CH Up/TRK+	 Up
 9	 9	 PR/CH	 Down
 0	 0	 Right	 Right
 Clear	 Exit	 Left	 Left
 Av Input	 AV	 Enter	 Ok
 <</Backward	 <<	 O))/Audio	 Dual





Original	Sustituto
 [...] / Subtitle	 Subt
 Zoom	 Shift + Eject
 I.Skip	 Text
 Rec Mode	 Shift + Rec
 Dubbing	 Format
 Title	 Options
 Marker	 3D
 Play Mode	 Shift + Play
 Thumbnail	 Sleep
 CHP.ADD	 List
 - Search	 Shift + TV/R
 Tv/VCR	 TV/R
 Power Tv	 Shift + Power
 AV Input Tv	 Media
 PR/CH + Tv	 Ch +
 PR/CH - Tv	 Ch -
 Vol+ Tv	 Vol +

Original	Sustituto
 Vol- Tv	 Vol -

