

 

 















 

 

























 

 
 




 
 

 












Original	Sustituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Guide/List	 Guide / EPG / -/--
 0/Quick Acces	 0
 .../AD/SAP	 Fav / Marker / PC
 Vol+	 Vol+
 CH+	 CH+ / Page+
 Mute	 Mute / Dimmer
 Vol-	 Vol-

Original	Sustituto
 CH-	 CH- / Page-
 Micro	 Display / Media
 Home	 Menu / Home
 Source	 AV / Input / RDS
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Back	 Back / Return
 *	 D.Menu / Top
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Netflix	 Shift + Red / Netflix /
 prime video	 Shift + Blue / Prime Video / Random

Random





Original	Sustituto	Original	Sustituto
Disney+	Shift + Green / APP /		
Rakuten Tv	Shift + Yellow / YouTube /		
LG Channels	Smart / List		
alexa	TV/Radio /		

