



Original	Sustituto
Power	Power
Power Tv	+  Shift + Power
DVD	+  Shift + 2
VCR	+  Shift + 4
Eject/Open-Close	Eject / Surround
AV/Input Tv	+  Shift + AV / Input / RDS
1	1
2	2
3	3
PR/CH+ Tv	+  Shift + CH+ /
4	4
5	5
6	6
PR/CH- Tv	+  Shift + CH- /
7	7
8	8
9	9

Original	Sustituto
Vol+ Tv	Vol+
Clear	Exit / Cancel / Clear
0	0
AV/Input	AV / Input / RDS
Vol- Tv	Vol-
<<	<< / Tune-
>>	>> / Tune+
I<<	I<< / Preset-
>>I	>>I / Preset+
Pause/Step	Pause / Step / Freeze
Play	Play / Slow
Stop	Stop / Hold
Home	Menu / Home
Up	Up
PR/CH/TRK+	CH+ / Page+
Disc Menu/List	D.Menu / Top
Disc Menu/List	Smart / List



