



Original	Sustituto
Standby	Power
USB	SRC
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0/10	0
10+	-/-- / EPG
Time	P/C / FAV
SUB/MP3	MEDIA
Angle	Red (A)
Audio	Audio

Original	Sustituto
Mute	MUTE
Menu	MENU
Setup	VOD
Up	UP
Down	DOWN
Left	LEFT
Right	RIGHT
Enter	OK
Title	TV/R
L/R	Green (B)
>>	Rewind
Play	Fast Forward
Pause	Play
PBC	Yellow (C)
Stop	Pause
I<<	Stop
	First





Original	Sustituto
>>	Last
Vol-	VOL -
Vol+	VOL +
V-MODE	V-FOR
Repeat	TEXT
N/P	Blue (D)
Clear	EXIT
Prog	OPT+
A-B	Shift + VOD
Zoom	WIDE
Slow	CH +
Random	CH -
Return	BACK
Display	INFO
Step	Subt.

Original	Sustituto

