
 




 




 
 
 


 

 









 


 




Original	Sustituto
 Power	 Power
 Sleep	 Sleep / Timer
 iPod	 Green / APP / Repeat
 AUX	 Red / Netflix / Search
 AM	 Yellow / YouTube / Repeat
 FM	 Blue / Prime Video / Random
 I<<	 I<< / Preset-
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 >>I	 >>I / Preset+
 Vol+	 Vol+
 Vol-	 Vol-
 ((.))	 Smart / List
 Mute	 Mute / Dimmer
 ▲	 Up
 ▼	 Down
 Select	 OK

Original	Sustituto
 Menu	 Menu / Home

