

 

 
 


Original	Sustituto
	Power
	Mute / Dimmer
	Play / Slow
	Pause / Step / Freeze
	Rec / Rec Mode
	<< / Tune-
	>> / Tune+
	I<< / Preset-
	>>I / Preset+
	Audio / Lang I/II
	Subtitle / EQ
	Zoom / Size
	TV/Radio /
	Text / Goto
	Menu / Home
	Up
	Info / Angle

Original	Sustituto
	Left
	OK
	Right
	Exit / Cancel / Clear
	Down
	Vol+
	Smart / List
	CH+ / Page+
	Vol-
	CH- / Page-
	1
	2
	3
	4
	5
	6
	7





Original		Sustituto	
	8		8
	9		9
	EPG		Guide / EPG / -/--
	0		0
	FAV		Fav / Marker / PC
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	USB/Move		Shift + 8

Original		Sustituto	

