




 



 













 







 






Original	Sustituto
 Power	 Power
 Sleep	 Sleep
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 GUIDE
 Recall	 Back
 Audio	 Dual
 P.M.	 Smart

Original	Sustituto
 Info	 Info
 Input	 AV
 Up / CH+	 Up
 Up / CH+	 Ch +
 Down / CH-	 Down
 Down / CH-	 Ch -
 Right / Vol+ / Enter	 Right
 Left / Vol-	 Left
 Left / Vol-	 Vol -
 Right / Vol+ / Enter	 Vol +
 Right / Vol+ / Enter	 Ok
 Menu	 Menu
 Page+	 >>
 Page-	 <<
 Display	 Shift + Info
 Exit	 Exit
 Red	 Red





Original	Sustituto	Original	Sustituto
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		
 Size	 Eject		
 Stop	 Stop		
 Reveal	 TV/R		
 Index	 Options		
 4:3 / 16:9	 Format		
 C.Lock	 Media		
 Sub.PG	 Subt		
 On/Mix/Off	 Text		

