



Original	Sustituto
	Power
	Source
	1
	2
	3
	4
	5
	6
	7
	8
	9
	TV/Radio /
	0
	Recall
	V+
	Mute
	P+

Original	Sustituto
	V-
	World/Internet
	P-
	Menu
	Q.Menu
	Up
	Left
	OK
	Right
	Down
	Back
	Exit
	i
	Music/Camera
	TV Guide
	* / O
	* / Q



