



| Original | Sustituto         |
|----------|-------------------|
| Power    | Power             |
| Mute     | Mute / Dimmer     |
| 1        | 1                 |
| 2        | 2                 |
| 3        | 3                 |
| 4        | 4                 |
| 5        | 5                 |
| 6        | 6                 |
| 7        | 7                 |
| 8        | 8                 |
| 9        | 9                 |
| TV / R   | TV/Radio /        |
| 0        | 0                 |
| Home     | Shift + Menu /    |
| Fav      | Fav / Marker / PC |
| Back     | Back / Return     |
| Audio    | Audio / Lang I/II |

| Original | Sustituto             |
|----------|-----------------------|
| Info     | Info / Angle          |
| EPG      | Guide / EPG / -/-     |
| Up       | Up                    |
| Left     | Left                  |
| OK       | OK                    |
| Right    | Right                 |
| Down     | Down                  |
| Menu     | Menu / Home           |
| Exit     | Exit / Cancel / Clear |
| Vol +    | Vol+                  |
| P +      | Shift + CH+ /         |
| CH +     | CH+ / Page+           |
| Vol -    | Vol-                  |
| List     | Smart / List          |
| CH -     | CH- / Page-           |
| P -      | Shift + CH- /         |
| OPT      | Setup / OPT /         |





|  | Original | Sustituto                   | Original | Sustituto |
|--|----------|-----------------------------|----------|-----------|
|  | Text     | Text / Goto                 |          |           |
|  | Sub.     | Subtitle / EQ               |          |           |
|  | Message  | Display / Media             |          |           |
|  | Pause    | Pause / Step / Freeze       |          |           |
|  | <<       | << / Tune-                  |          |           |
|  | >>       | >> / Tune+                  |          |           |
|  | Rec      | Rec / Rec Mode              |          |           |
|  | Play     | Play / Slow                 |          |           |
|  | I<<      | I<< / Preset-               |          |           |
|  | >>I      | >>I / Preset+               |          |           |
|  | Stop     | Stop / Hold                 |          |           |
|  | Red      | Red / Netflix / Search      |          |           |
|  | Green    | Green / APP / Repeat        |          |           |
|  | Yellow   | Yellow / YouTube / Repeat   |          |           |
|  | Blue     | Blue / Prime Video / Random |          |           |
|  |          |                             |          |           |
|  |          |                             |          |           |

