

























 




| Original   | Sustituto   |
|--|---|
|  Power        |  Power                     |
|  OSD          |  Display / Media           |
|  Open / Close |  Eject / Surround          |
|  N/P          |  Picture / Format          |
|  Repeat       |  Green / APP / Repeat      |
|  A-B          |  Yellow / YouTube / Repeat |
|  RAN          |  Smart / List              |
|  L/R          |  D.Menu / Top              |
|  Slow         |  Shift + Play /            |
|  Resume       |  Shift + Right             |
|  Step       |  Shift + Pause / Step /  |
|  Key+       |  CH+ / Page+             |
|  Return     |  Back / Return           |
|  3D         |  Shift + 3               |
|  Vol+       |  Vol+                    |
|  Key-       |  CH- / Page-             |
|  Time       |  Sleep / Timer           |

| Original   | Sustituto   |
|--|---|
|  PDVD     |  AV / Input / RDS        |
|  Vol-     |  Vol-                    |
|  Language |  Audio / Lang I/II       |
|  Subtitle |  Subtitle / EQ           |
|  Angle    |  Info / Angle            |
|  Prog     |  TV/Radio /              |
|  Setup    |  Setup / OPT /           |
|  Up       |  Up                      |
|  Title    |  Sound / Title           |
|  Left     |  Left                    |
|  Enter  |  OK                    |
|  Right  |  Right                 |
|  Menu   |  Menu / Home           |
|  Down   |  Down                  |
|  Zoom   |  Zoom / Size           |
|  Play   |  Play / Slow           |
|  Pause  |  Pause / Step / Freeze |





| Original  | Sustituto   |
|---|---|
|  Stop      |  Stop / Hold             |
|  Mute      |  Mute / Dimmer           |
|  1         |  1                       |
|  2         |  2                       |
|  3         |  3                       |
|  I<< Prev  |  I<< / Preset-           |
|  4         |  4                       |
|  5         |  5                       |
|  6         |  6                       |
|  >>I Next |  >>I / Preset+          |
|  7       |  7                     |
|  8       |  8                     |
|  9       |  9                     |
|  << REV  |  << / Tune-            |
|  10/0    |  0                     |
|  10+     |  Guide / EPG / -/--    |
|  Clear   |  Exit / Cancel / Clear |

| Original   | Sustituto  |
|--|--|
|  >> FWD |  >> / Tune+ |

