






 

 



 

 



 



 

 



 








Original	Sustituto
 Power	 Power
 Auto	 Smart
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Shift + Guide
 Recall	 Back
 Vol+	 Vol +
 Vol-	 Vol -

Original	Sustituto
 Aspect	 3D
 Audio	 Dual
 Display	 Info
 CH+	 Ch +
 CH-	 Ch -
 Menu	 Menu
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Source	 AV
 P.Mode	 Shift + Format
 S.Mode	 Shift + Dual
 Sleep	 Sleep
 FAV	 Pre Ch





Original	Sustituto	Original	Sustituto
	FAV-    SHIFT + CH -    Shift + Ch -		Stop
	FAV+    SHIFT + CH +    Shift + Ch +		I<<
	EPG    GUIDE    Guide		>>I
	TEXT    REPEAT TEXT    Text		Red
	HOLD    SETTINGS OPT    Options		Green
	Tv/Radio    SEARCH TV/R    TV/R		Yellow
	Subtitle    AD SUBT    Subt		Blue
	Index    DISC NAV LIST    List		
	Reveal    E-MANUAL D.MENU    D. Menu		
	Subpage    ZOOM    Eject		
	Media    APP MEDIA    Media		
	Size    PICTURE FORMAT    Format		
	Play    PLAY MODE    Play		
	Pause    PAUSE    Pause		
	<<    <<<    <<		
	>>    >>>    >>		
	Rec    REC MODE    Rec		

