





 



 

 


 

 



 
 




Original	Sustituto
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 CH.List	 Smart / List
 0	 0
 Recall	 Back / Return
 Vol+	 Vol+
 PIC.Mode	 Picture / Format
 S.Mode	 Sound / Title

Original	Sustituto
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Source	 AV / Input / RDS
 CH-	 CH- / Page-
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Menu	 Menu / Home
 Rec	 Rec / Rec Mode
 Timeshift	 Shift + Pause / Step /
 Timer	 Shift + Sleep / Timer
 Rec.List	 Shift + Smart / List
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat





Original	Sustituto
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Shift + Picture / Format
	TV/Radio /
	Sleep / Timer
	Subtitle / EQ
	Info / Angle
	D.Menu / Top
	Audio / Lang I/II
	Display / Media
	Text / Goto
	Zoom / Size
	Play / Slow
	Pause / Step / Freeze
	Setup / OPT /
	Stop / Hold
	Shift + Stop / Hold

Original	Sustituto
	I<< / Preset-
	>>I / Preset+
	<< / Tune-
	>> / Tune+

