






Original	Sustituto
	 Power
	 Stop / Hold
	 Pause / Step / Freeze
	 Rec / Rec Mode
	 << / Tune-
	 Play / Slow
	 >> / Tune+
	 Guide / EPG / -/--
	 Eject / Surround
	 Display / Media
	 AV / Input / RDS
	 TV/Radio /
	 Picture / Format
	 Menu / Home
	 Smart / List
	 Shift + Smart / List
	 Info / Angle

Original	Sustituto
	 Up
	 Left
	 OK
	 Right
	 Exit / Cancel / Clear
	 Down
	 Setup / OPT /
	 Back / Return
	 CH- / Page-
	 CH+ / Page+
	 Vol-
	 Mute / Dimmer
	 Vol+
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random





Original	Sustituto
1. #	TV 1
2 ABC	DVD 2
DEF 3	CD - STB 3
4 GHI	VIDEO 4
5 JKL	TAPE 5
MNO 6	TUNER 6
7 PQRS	AUX - HDD 7
8 TUV	USB 8
WXYZ 9	BLUETOOTH 9
SUBTITLE	EQ SUBTITLE
0	HDMI - BAT 0
TEXT	GOTO TEXT

Original	Sustituto

