

 

 
 






Original	Sustituto
	 Power
	 Mute
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 0
	 +  Shift + Guide
	 Back
	 Info
	 AV
	 Up

Original	Sustituto
	 Left
	 Ok
	 Right
	 Down
	 Exit
	 Menu
	 Vol +
	 Vol -
	 +  Shift + Dual
	 Ch +
	 Ch -
	 Dual
	 +  Shift + Format
	 Smart
	 Sleep
	 Format
	 Red





Original	Sustituto
Red / Eject	Eject
Green / D.Menu	Green
Green / D.Menu	D. Menu
Yellow / Setup	Yellow
Yellow / Setup	Options
Blue / D.Disp	Blue
Blue / D.Disp	List
Play/Pause / Text	Text
Play/Pause / Text	Play
Play/Pause / Text	Pause
Stop / Index	Stop
A-B / MIX	Shift + TV/R
Repeat / Reveal	Shift + Text
<< / Hold	Shift + Stop
<< / Hold	<<
>> / Subpage	>>
>> / Subpage	Shift + Subt

Original	Sustituto
I<< / Size	I<<
I<< / Size	Shift + Eject
>>I / Cancel	>>I
>>I / Cancel	Shift + Exit
Time Shift	Media
Rec	Rec
FAV-	Shift + Left
FAV+	Shift + Right
EPG	Guide
FAV	Pre Ch
Subtitle	Subt
TV / Radio	TV/R

