



 







 

 
 

 


















 



 



 



 



 

 

 















Original	Sustituto	Original	Sustituto
 Power	 Power	 Up	 Up
 EPG	 Guide / EPG / -/--	 Display	 Display / Media
 REP	 TV/Radio /	 Left	 Left
 Mute	 Mute / Dimmer	 OK	 OK
 Rec List	 Shift + Rec / Rec Mode	 Right	 Right
 CH List	 Smart / List	 Menu	 Menu / Home
 Subtitle	 Subtitle / EQ	 Down	 Down
 Eject	 Eject / Surround	 Exit	 Exit / Cancel / Clear
 Rec	 Rec / Rec Mode	 1	 1
 Stop	 Stop / Hold	 2	 2
 I<<	 I<< / Preset-	 3	 3
 >>I	 >>I / Preset+	 4	 4
 Pause	 Pause / Step / Freeze	 5	 5
 Play	 Play / Slow	 6	 6
 <<	 << / Tune-	 7	 7
 >>	 >> / Tune+	 8	 8
 Source	 AV / Input / RDS	 9	 9





Original	Sustituto
	0
	Back / Return
	Fav / Marker / PC
	Vol+
	Picture / Format
	Audio / Lang I/II
	CH+ / Page+
	Vol-
	Sound / Title
	Sleep / Timer
	CH- / Page-
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Setup / TV/Txt / Setup / OPT /
	D.Menu / Top

Original	Sustituto
	Title / Reveal / Shift + Sound / Title
	PRO / Shift + Display / Media
	LAN / Hold / Shift + Smart / List
	Size / A-B / Zoom / Size
	Goto / Subpage / Text / Goto
	Index / Slow / Info / Angle



Cancel Menu