













 









 



 







 

 

 



 



 



 



 



 











Original		Sustituto		Original		Sustituto	
	Power		Power		9		9
	Energy		Setup / OPT /		0		0
	Picture		Picture / Format		TTX		Text / Goto
	Sound		Sound / Title		Recall		Back / Return
	Mute		Mute / Dimmer		Menu		Menu / Home
	Audio		Audio / Lang I/II		Input		AV / Input / RDS
	Subtitle		Subtitle / EQ		Exit		Exit / Cancel / Clear
	16:9/4:3		Shift + Picture / Format		Info		Info / Angle
	Sleep		Sleep / Timer		Up		Up
	1		1		Down		Down
	2		2		Right		Right
	3		3		Left		Left
	4		4		OK		OK
	5		5		Vol+		Vol+
	6		6		Vol-		Vol-
	7		7		Index/CH List		Smart / List
	8		8		Hold/EPG		Guide / EPG / -/-



