



| Original | Sustituto                  |
|----------|----------------------------|
| Power    | Power                      |
| Mute     | Mute / Dimmer              |
| 1        | 1                          |
| 2        | 2                          |
| 3        | 3                          |
| 4        | 4                          |
| 5        | 5                          |
| 6        | 6                          |
| 7        | 7                          |
| 8        | 8                          |
| 9        | 9                          |
| -/--     | Shift + Guide / EPG / -/-- |
| 0        | 0                          |
| Recall   | Back / Return              |
| Audio    | Audio / Lang I/II          |
| FAV+     | Shift + CH+ /              |
| FAV      | Fav / Marker / PC          |

| Original | Sustituto                |
|----------|--------------------------|
| FAV-     | Shift + CH- /            |
| CH+      | CH+ / Page+              |
| P.Mode   | Picture / Format         |
| Vol+     | Vol+                     |
| CH-      | CH- / Page-              |
| S.Mode   | Sound / Title            |
| Vol-     | Vol-                     |
| Source   | AV / Input / RDS         |
| Sleep    | Sleep / Timer            |
| Aspect   | Shift + Picture / Format |
| Info     | Info / Angle             |
| Up       | Up                       |
| Left     | Left                     |
| OK       | OK                       |
| Right    | Right                    |
| Menu     | Menu / Home              |
| Down     | Down                     |



