

 








 



 




 

 
 



 

 
 


 








Original		Sustituto		Original		Sustituto	
	Standby		Power		Tv/Radio		TV/R
	Source		AV		Vol+		Vol +
	1		1		Vol-		Vol -
	2		2		Mute		Mute
	3		3		CH+		Ch +
	4		4		CH-		Ch -
	5		5		Menu		Menu
	6		6		Exit		Exit
	7		7		Up		Up
	8		8		Down		Down
	9		9		Right		Right
	0		0		Left		Left
	[*]/Display		Info		Enter		Ok
	Recall		Back		TXT		Text
	Freeze		Options		Play		Play
	P.Mode		Format		Pause/Time Shift		Pause
	S.Mode		Dual		Stop/EPG		Stop





Original	Sustituto	Original	Sustituto
Record	Rec		
<</Index	<<		
>>/Hold	>>		
I<</Reveal	I<<		
>>I/Subpage	>>I		
Mix/Fav List	Pre Ch		
Size/Subtitle	Subt		
Cancel/Audio	3D		
Red	Red		
Green	Green		
Yellow	Yellow		
Blue	Blue		

Original	Sustituto

