





 





Original	Sustituto
Power	Power
Mute	Mute / Dimmer
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
---	Shift + Guide / EPG / ---
Recall	Back / Return
Sleep	Sleep / Timer
Audio	Audio / Lang I/II
Aspect	Shift + Picture / Format

Original	Sustituto
Input	AV / Input / RDS
Info	Info / Angle
Menu	Menu / Home
Exit	Exit / Cancel / Clear
Up	Up
Down	Down
Right	Right
Left	Left
OK	OK
Vol+	Vol+
Vol-	Vol-
FAV	Fav / Marker / PC
P.Mode	Picture / Format
S.Mode	Sound / Title
CH+	CH+ / Page+
CH-	CH- / Page-
Red	Red / Netflix / Search





Original	Sustituto
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Home	 Shift + Menu /
 Setup	 Setup / OPT /
 Refresh	 Display / Media
 Text	 Text / Goto
 Play	 Play / Slow
 EPG/Mouse	 Guide / EPG / -/--
 I<<	 I<< / Preset-
 Stop/Reveal	 Stop / Hold
 Rec	 Rec / Rec Mode
 Size	 Zoom / Size
 Pause/Mix	 Pause / Step / Freeze
 <</Hold	 << / Tune-
 Tv/Radio	 TV/Radio /
 >>/Subpage	 >> / Tune+

Original	Sustituto
 Index	 Smart / List
 Sub-T	 Subtitle / EQ
 >>I/Cancel	 >>I / Preset+
 T-Shift	 Eject / Surround

