

 






 
 


 




 





 
 


 
 
 

 




 


 
 



 
 


 

 

 



 














Original	Sustituto	Original	Sustituto
 Power	 Power	 Stop / Reveal	 Stop
 Mute	 Mute	 << / Hold	 <<
 Red	 A	 >> / Subpage	 >>
 Green	 B	 I<< / Size	 I<<
 Yellow	 C	 >>I / Cancel	 >>I
 Blue	 D	 Info	 Info
 EPG	 GUIDE	 Input	 AV
 Repeat	 D. Menu	 Up	 Up
 Zoom	 Eject	 Left	 Left
 Goto	 3D	 OK	 Ok
 Sub-T	 Subt	 Right	 Right
 Audio	 Dual	 Down	 Down
 Sleep	 Sleep	 Menu	 Menu
 TV/Radio	 TV/R	 Exit	 Exit
 Text	 Text	 Vol+	 Vol +
 Play / Index	 Play	 Vol-	 Vol -
 Pause / Mix	 Pause	 P-Mode	 Format





	Original	Sustituto	
	S-Mode	List	
	CH+	Ch +	
	CH-	Ch -	
	1	1	
	2	2	
	3	3	
	4	4	
	5	5	
	6	6	
	7	7	
	8	8	
	9	9	
	--	Shift + Guide	
	0	0	
	Recall	Back	
	Fav	Pre Ch	
	Fav+	Smart	

	Original	Sustituto
	Fav-	Media

