



























 

































 

 


 




Original	Sustituto
	 Power
	 Mute / Dimmer
	 TV/Radio /
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 0
	 AV / Input / RDS
	 Fav / Marker / PC
	 Up
	 CH+ / Page+

Original	Sustituto
	 CH- / Page-
	 Down
	 Right
	 Vol+
	 Left
	 Vol-
	 OK
	 Menu / Home
	 Zoom / Size
	 Audio / Lang I/II
	 Info / Angle
	 Sleep / Timer
	 Back / Return
	 Picture / Format
	 Shift + Sleep / Timer
	 Sound / Title
	 Red / Netflix / Search





Original	Sustituto
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Index	Display / Media
Hold	Stop / Hold
Size	Shift + Zoom /
Text	Text / Goto
Subtitle	Subtitle / EQ
Mix	Shift + Text /
Reveal	D.Menu / Top
Cancel	Exit / Cancel / Clear
Sub Code	Shift + Back / Return

Original	Sustituto

