



Original	Sustituto
Power	Power
Mute	Mute / Dimmer
I-II	Audio / Lang I/II
Scale	Smart / List
Sleep	Sleep / Timer
Display	Display / Media
Text	Text / Goto
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
Jump	Back / Return

Original	Sustituto
0	0
ENT	Fav / Marker / PC
Vol+	Vol+
TV	TV/Radio /
TV	Shift + 1
CH+	CH+ / Page+
Vol-	Vol-
Input	AV / Input / RDS
CH-	CH- / Page-
Exit	Exit / Cancel / Clear
Up	Up
Menu	Menu / Home
Left	Left
OK	OK
Right	Right
S.Mode	Sound / Title
Down	Down



