



























 

 

























Original	Sustituto	Original	Sustituto
	Power		Power
	OPTICAL		8
	OPTICAL		4
	Mute		Mute / Dimmer
	AUX		7
	AUX		1
	BT		9
	BT		2
	HDMI ARC		0
	HDMI ARC		3
	Vol+		Vol+
	Vol+		Up
	Left / I<<		Left
	Left / I<<		I<< / Preset-
	Play/Pause / Pair		OK
	Play/Pause / Pair		Pause / Step / Freeze
	Play/Pause / Pair		Play / Slow
	Right / >>I		Right
	Right / >>I		>>I / Preset+
	Bass-		CH- / Page-
	Vol-		Vol-
	Vol-		Down
	Bass+		CH+ / Page+
	Flat		Red / Netflix / Search
	Movie		Green / APP / Repeat
	Music		Yellow / YouTube / Repeat

