



Original	Sustituto
Standby	Power
Auto / Eject	Eject / Surround
Mute	Mute / Dimmer
P.Mode	Picture / Format
S.Mode	Sound / Title
Info	Info / Angle
Nicam	Audio / Lang I/II
1	1
2	2
3	3
Menu	Menu / Home
4	4
5	5
6	6
Exit / D.Setup	Setup / OPT /
Exit / D.Setup	Exit / Cancel / Clear
7	7

Original	Sustituto
8	8
9	9
Input	AV / Input / RDS
0	0
Recall	Back / Return
Sleep	Sleep / Timer
Up	Up
Left	Left
Enter	OK
Right	Right
Down	Down
CH-	CH- / Page-
CH+	CH+ / Page+
Vol-	Vol-
Vol+	Vol+
Text / Slow	Text / Goto
Text / Slow	Shift + Play / Slow





Original	Sustituto
Hold / Play/Pause	Play / Slow
Hold / Play/Pause	+ Shift + Stop /
Hold / Play/Pause	Pause / Step / Freeze
Page+ / Stop	Stop / Hold
Page+ / Stop	+ Shift + CH+ /
Page- / Zoom	Zoom / Size
Page- / Zoom	+ Shift + CH- /
[≡i] / I<<	I<< / Preset-
[≡□] / >>I	>>I / Preset+
[≡?] / <<	<< / Tune-
[≡●] / >>	>> / Tune+
EPG / D.Menu	D.Menu / Top
EPG / D.Menu	Guide / EPG / -/-
FAV / D.Title	+ Shift + Sound / Title
FAV / D.Title	Fav / Marker / PC
FAV- / D.Disp	Display / Media
FAV- / D.Disp	+ Shift + Down

Original	Sustituto
FAV+ / Goto	+ Shift + Up
FAV+ / Goto	+ Shift + Text /
Red / D.Prog	TV/Radio /
Red / D.Prog	Red / Netflix / Search
Green / Step	+ Shift + Pause / Step /
Green / Step	Green / APP / Repeat
Yellow / RPT	+ Shift + Green / APP /
Yellow / RPT	Yellow / YouTube / Repeat
Blue / A-B	+ Shift + Yellow / YouTube /
Blue / A-B	Blue / Prime Video / Random
List / Angle	+ Shift + Info / Angle
List / Angle	Smart / List
SUB-T	Subtitle / EQ
Aspect	+ Shift + Picture / Format
Rec	Rec / Rec Mode

