


 





















Original	Sustituto	Original	Sustituto
POWER	 Power	DOWN	 Down
MUTE	 Mute / Dimmer	REPLAY	 Back / Return
PLAY	 Play / Slow	DISPLAY	 Display / Media
PAUSE	 Pause / Step / Freeze	A-B	 Yellow / YouTube / Repeat
STOP	 Stop / Hold	SLOW	 Shift + Play /
<<	 << / Tune-	OK	 Shift + OK
>>	 >> / Tune+		
I<<	 I<< / Preset-		
>>I	 >>I / Preset+		
SUBTITLE	 Subtitle / EQ		
OPEN	 Eject / Surround		
SETUP	 Setup / OPT /		
MENU	 Menu / Home		
UP	 Up		
LEFT	 Left		
SELECT	 OK		
RIGHT	 Right		

