





 

 





 



 



 

 

 





 

 

 



 



 






 



 
 

 

 











Original	Sustituto	Original	Sustituto
 Power	 Power	 Play	 Play / Slow
 Record	 Rec / Rec Mode	 Exit	 Exit / Cancel / Clear
 Mute	 Mute / Dimmer	 FAV	 Fav / Marker / PC
 1	 1	 Stop	 Stop / Hold
 2	 2	 Up/CH+	 Up
 3	 3	 Left	 Left
 4	 4	 Vol-	 Vol-
 5	 5	 OK	 OK
 6	 6	 Right	 Right
 7	 7	 Vol+	 Vol+
 8	 8	 Down/CH-	 Down
 9	 9	 Red	 Red / Netflix / Search
 Info	 Info / Angle	 Green	 Green / APP / Repeat
 0	 0	 Yellow	 Yellow / YouTube / Repeat
 Recall	 Back / Return	 Audio	 Audio / Lang I/II
 Menu	 Menu / Home	 Blue	 Blue / Prime Video / Random
 EPG	 Guide / EPG / -/--	 Pause	 Pause / Step / Freeze





Original		Sustituto		Original		Sustituto	
	TTX		Text / Goto				
	Subtitle		Subtitle / EQ				
	Tv/Radio		TV/Radio /				

