

 

 

 

 

 

 

 



 

 

















Original	Sustituto
 Power	 Power
 SD Card	 Display / Media
 Input TV	 TV/Radio /
 Input AV	 AV / Input / RDS
 Menu	 Menu / Home
 [+]/Aspect	 Picture / Format
 N	 Sound / Title
 Direct Rec TV	 Shift + Rec / Rec Mode
 i	 Info / Angle
 Exit	 Exit / Cancel / Clear
 Viera Tools	 D.Menu / Top
 Viera Link	 Smart / List
 Up	 Up
 Guide	 Guide / EPG / -/--
 Left	 Left
 OK	 OK
 Right	 Right

Original	Sustituto
 Option	 Setup / OPT /
 Down	 Down
 Return	 Back / Return
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Text	 Text / Goto
 [=◆]/STTL	 Subtitle / EQ
 [=i]/Index	 Eject / Surround
 [=+]/Hold	 Shift + Stop /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6





Original	Sustituto	Original	Sustituto
7	7	II>/Step	Pause / Step / Freeze
8	8	Rec	Rec / Rec Mode
9	9		
Mute	Mute / Dimmer		
0	0		
Recall/Last View	Fav / Marker / PC		
Vol+	Vol+		
PR+	CH+ / Page+		
Vol-	Vol-		
PR-	CH- / Page-		
Power Down	Shift + Power		
PR- Down	Shift + CH- /		
PR+ Down	Shift + CH+ /		
<</I<<	<< / Tune-		
Play	Play / Slow		
>>/>>I	>> / Tune+		
Stop	Stop / Hold		

Original	Sustituto	Original	Sustituto
II>/Step	Pause / Step / Freeze		
Rec	Rec / Rec Mode		

