




 

 



 

 





 





 



 



 
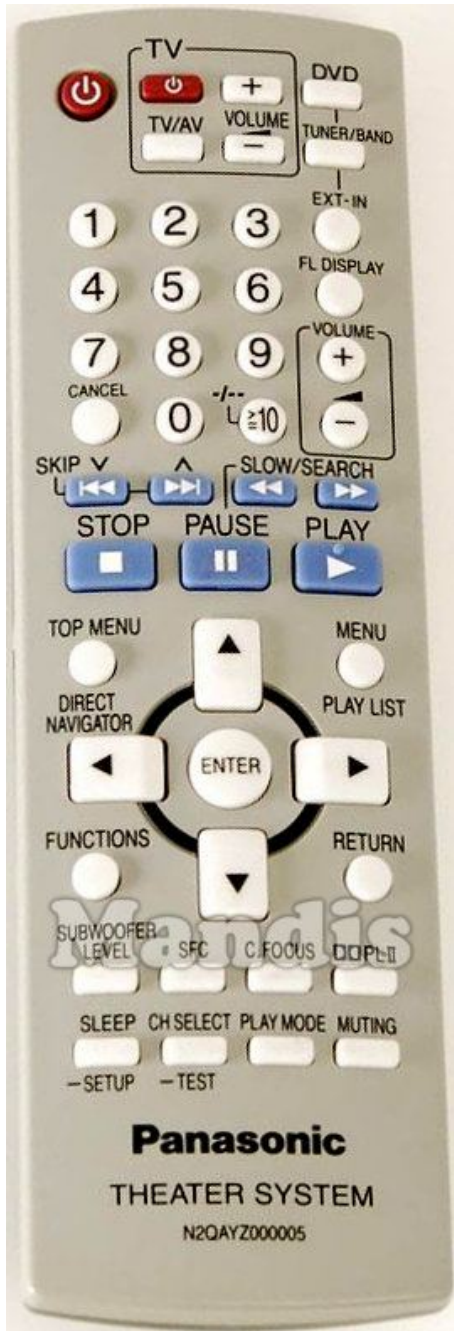


Original	Sustituto	Original	Sustituto
	Power		Power
	DVD		Blue
	Tuner/Band		Green
	Ext-In		Red
	FL Display		Info
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	+10/-/-		Guide
	Cancel		Exit

Original	Sustituto	Original	Sustituto
	Vol+		Vol +
	Vol-		Vol -
	Muting		Mute
	▲		Ch +
	▼		Ch -
	I<< Skip		I<<
	Skip >>I		>>I
	<< Slow/Search		<<
	Slow/Search >>		>>
	Stop		Stop
	Pause		Pause
	Play		Play
	Top Menu/Direct Navigator		Shift + Menu
	Menu/Play List		Menu
	Functions		D. Menu
	Return		Back
	Up		Up





Original	Sustituto
Down	Down
Right	Right
Left	Left
Enter	Ok
Subwoofer	Subt
SFC	TV/R
C.Focus	Format
Dolby/PL II	Dual
Sleep/-Setup	Sleep
CH Select/-Test	Pre Ch
	+
Play Mode	Shift + Play
	+
Power Tv	Shift + Power
TV/AV Tv	AV
	+
Vol+ Tv	Shift + Vol +
	+
Vol- Tv	Shift + Vol -

Original	Sustituto

