



Original	Sustituto	Original	Sustituto
Power DVD	Power	Prog/Check	Sleep
Select Drive	Smart	I<< Skip	I<<
1	1	Skip >>I	>>I
2	2	<< Slow/Search	<<
3	3	Slow/Search >>	>>
4	4	Stop	Stop
5	5	Play/x1.3	Play
6	6	Pause	Pause
7	7	i/Status	Media
8	8	Exit	Exit
9	9	Option	Options
0	0	Return	Back
Delete/*	D. Menu	Function Menu	Menu
Input Select	AV	Direct Navigator	List
CH/Page Up	Ch +	Guide	Guide
CH/Page Down	Ch -	Up	Up
ShowView	Pre Ch	Down	Down



