











































 




Original	Sustituto	Original	Sustituto
On/Off	 Power	Video/Go-To	 Text / Goto
Audio Out	 Mute / Dimmer	VCR/TV	 AV / Input / RDS
Play	 Play / Slow	Menu	 Menu / Home
Pause	 Pause / Step / Freeze	Menu Up	 Up
Stop	 Stop / Hold	Encode	 Info / Angle
Record	 Rec / Rec Mode	Menu Left	 Left
Rewind	 << / Tune-	OK Enter	 OK
F.Forward	 >> / Tune+	Menu Right	 Right
Prev.	 I<< / Preset-	Exit	 Exit / Cancel / Clear
Next	 >>I / Preset+	Menu Down	 Down
Audio Dub	 Sound / Title	P.Back/R.+Play	 Back / Return
Audio	 Audio / Lang I/II	Slow/Dpss+	 Vol+
X2 Rew/Play	 Subtitle / EQ	Auto/Track	 Smart / List
F.Adv	 Picture / Format	Tracking+	 CH+ / Page+
T.Set/Clock	 Sleep / Timer	Slow/Dpss-	 Vol-
Sp/Lp/Speed	 D.Menu / Top	Display	 Display / Media
Mon/TV	 Setup / OPT /	Tracking-	 CH- / Page-



Original	Sustituto	Original	Sustituto
1	 1		
2	 2		
3	 3		
4	 4		
5	 5		
6	 6		
7	 7		
8	 8		
9	 9		
-/--	 Guide / EPG / -/--		
0	 0		
Slow Down	 +  Shift + Play /		

