



Original		Sustituto		Original		Sustituto	
	Power		Power		TV	+	Shift + 1
	1		1		Up / P+	+	Shift + Up
	2		2		Up / P+		Up
	3		3		AV		AV / Input / RDS
	4		4		Left / V-		Left
	5		5		Left / V-	+	Shift + Left
	6		6		Menu		Menu / Home
	7		7		Menu	+	Shift + Menu /
	8		8		Right / V+		Right
	9		9		Right / V+	+	Shift + Right
	Mute		Mute / Dimmer		S / M / D		Exit / Cancel / Clear
	0		0		Down / P-	+	Shift + Down
	16:9		Picture / Format		Down / P-		Down
	Red		Red / Netflix / Search		Recall		Back / Return
	Green		Green / APP / Repeat		Recall	+	Shift + Back / Return
	Yellow		Yellow / YouTube / Repeat		i		Info / Angle
	Blue		Blue / Prime Video / Random		EQ		Subtitle / EQ





Original	Sustituto
	SHIFT + ANGLE INFO Shift + Info / Angle
	TITLE SOUND Sound / Title
	GOTO TEXT Text / Goto
	OPT-TOOLS SETUP Setup / OPT /
	HOLD Stop / Hold
	SIZE ZOOM Zoom / Size
	TIMER SLEEP Sleep / Timer
	TOP MENU D.MENU D.Menu / Top

Original	Sustituto

