




Original	Sustituto
PP	Back / Return
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
P<P	Fav / Marker / PC
0	0
--	Guide / EPG / -/--
M	Menu / Home
i	Info / Angle
I-II	Audio / Lang I/II

Original	Sustituto
Mute	Mute / Dimmer
Left	Left
Up	Up
Right	Right
OK	OK
Down	Down
V -	Vol-
V +	Vol+
P -	CH- / Page-
P +	CH+ / Page+
Red / Sound	Red / Netflix / Search
Red / Sound	Sound / Title
Green / Picture	Green / APP / Repeat
Green / Picture	Picture / Format
Yellow / Feature	Yellow / YouTube / Repeat
Blue / Install	Blue / Prime Video / Random
Text	Text / Goto





	Original	Sustituto	
	[≡o]	TIMER SLEEP	Sleep / Timer
	Hold	HOLD	Stop / Hold
	[≡X]	CLEAR EXIT CANCEL	Exit / Cancel / Clear
	Mix / PIP Swap	LIST SMART	Smart / List
	PIP / Size	SIZE ZOOM	Zoom / Size
	PIP Down / [≡?]	PRESET- I<<	I<< / Preset-
	PIP Up / Index	PRESET+ >>I	>>I / Preset+
	[TV]	PROGRAM TV/RADIO	TV/Radio /
	[AV]	RDS AV INPUT	AV / Input / RDS

	Original	Sustituto

