



 



 





























Original	Sustituto
 Power	 Power
 Mute	 Mute / Dimmer
 Audio / Nicam/A2	 Audio / Lang I/II
 Aspect	 Shift + Picture / Format
 P Mode	 Picture / Format
 S Mode	 Sound / Title
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 FAV	 Fav / Marker / PC
 0	 0

Original	Sustituto
 Recall	 Back / Return
 Display	 Display / Media
 Freeze	 Shift + Pause / Step /
 Rec / Optional	 Shift + Rec / Rec Mode
 Rec / Optional	 Rec / Rec Mode
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Sleep	 Sleep / Timer
 Up	 Up
 Source	 AV / Input / RDS
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 Menu	 Menu / Home





Original	Sustituto
Exit	Exit / Cancel / Clear
CH +	CH+ / Page+
Subtitle	Subtitle / EQ
Vol +	Vol+
CH -	CH- / Page-
Home	Shift + Menu /
Vol -	Vol-
Hold / Play/Pause	Play / Slow
Hold / Play/Pause	Shift + Play /
Hold / Play/Pause	Pause / Step / Freeze
Reveal / <<	<< / Tune-
Size / >>	Shift + >> /
Size / >>	>> / Tune+
Index / Stop	Shift + Stop /
Index / Stop	Stop / Hold
I<<	I<< / Preset-
S.Page / >>	Shift + >>  / Preset+

Original	Sustituto
S.Page / >>	>>  / Preset+
Text	Text / Goto
	Guide / EPG / /-/-
Mouse	Smart / List

