



 



 



 

 





 








 









 





 


 
 


Original	Sustituto	Original	Sustituto
 VHS/DVD Power	 Power	 Create Chapter	 TV/R
 Direct TV Rec	 Subt	 I<< Skip	 I<<
 VHS/DVD	 Smart	 Skip >>I	 >>I
 1	 1	 REW / << Slow/Search	 <<
 2	 2	 FF / Slow/Search	 >>
 3	 3	 Stop	 Stop
 4	 4	 Pause	 Pause
 5	 5	 Play	 Play
 6	 6	 Direct Navigator / Top Menu	 D. Menu
 7	 7	 Functions	 List
 8	 8	 Up	 Up
 9	 9	 Left	 Left
 0	 0	 Enter	 Ok
 Cancel / Reset	 Exit	 Right	 Right
 Input Select	 Guide	 Down	 Down
 CH+ / Tracking/V-Lock+	 Ch +	 Sub Menu	 Menu
 CH- / Tracking/V-Lock-	 Ch -	 Return	 Back

 
Original	Sustituto	Original	Sustituto
 VHS/DVD Power	 Power	 Create Chapter	 TV/R
 Direct TV Rec	 Subt	 I<< Skip	 I<<
 VHS/DVD	 Smart	 Skip >>I	 >>I
 1	 1	 REW / << Slow/Search	 <<
 2	 2	 FF / Slow/Search	 >>
 3	 3	 Stop	 Stop
 4	 4	 Pause	 Pause
 5	 5	 Play	 Play
 6	 6	 Direct Navigator / Top Menu	 D. Menu
 7	 7	 Functions	 List
 8	 8	 Up	 Up
 9	 9	 Left	 Left
 0	 0	 Enter	 Ok
 Cancel / Reset	 Exit	 Right	 Right
 Input Select	 Guide	 Down	 Down
 CH+ / Tracking/V-Lock+	 Ch +	 Sub Menu	 Menu
 CH- / Tracking/V-Lock-	 Ch -	 Return	 Back


 

 






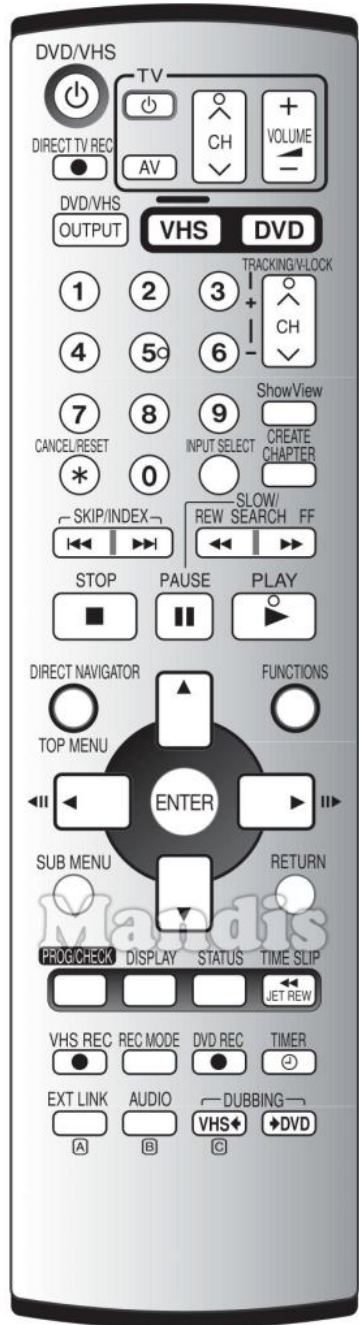


 
 
 

 
 



 

 
 




 


 
 
 


 


 


 










 
 

 








 
 
 
 
 
 



 

 




 

 

 

 



 

 



 

 



 


 


 











Original	Sustituto	Original	Sustituto
 VHS/DVD Power	 Power	 ShowView	 Media
 Direct TV Rec	 Subt	 I<< Index	 I<<
 VHS/DVD	 Smart	 Index >>I	 >>I
 1	 1	 REW	 <<
 2	 2	 FF	 >>
 3	 3	 Stop	 Stop
 4	 4	 Pause	 Pause
 5	 5	 Play	 Play
 6	 6	 Up	 Up
 7	 7	 Left	 Left
 8	 8	 Enter	 Ok
 9	 9	 Right	 Right
 0	 0	 Down	 Down
 Cancel / Reset	 Exit	 Return	 Back
 Input Select	 AV	 Prog/Check	 Sleep
 CH+ / Tracking/V-Lock+	 Ch +	 Display	 Info
 CH- / Tracking/V-Lock-	 Ch -	 Jet Rew	 Shift + <<

Original	Sustituto	Original	Sustituto
 VHS/DVD Power	 Power	 ShowView	 Media
 Direct TV Rec	 Subt	 I<< Index	 I<<
 VHS/DVD	 Smart	 Index >>I	 >>I
 1	 1	 REW	 <<
 2	 2	 FF	 >>
 3	 3	 Stop	 Stop
 4	 4	 Pause	 Pause
 5	 5	 Play	 Play
 6	 6	 Up	 Up
 7	 7	 Left	 Left
 8	 8	 Enter	 Ok
 9	 9	 Right	 Right
 0	 0	 Down	 Down
 Cancel / Reset	 Exit	 Return	 Back
 Input Select	 AV	 Prog/Check	 Sleep
 CH+ / Tracking/V-Lock+	 Ch +	 Display	 Info
 CH- / Tracking/V-Lock-	 Ch -	 Jet Rew	 Shift + <<



