































Original	Sustituto	Original	Sustituto
 Power	 Power	 FAV	 Fav / Marker / PC
 Mute	 Mute / Dimmer	 PG+	 CH+ / Page+
 TV / STB	 Shift + TV/Radio / Program	 PG-	 CH- / Page-
 TV / Radio	 TV/Radio /	 Vol+	 Vol+
 DVR Info	 Shift + Info / Angle	 Vol-	 Vol-
 SAT List	 Smart / List	 M / P	 D.Menu / Top
 1	 1	 Up	 Up
 2	 2	 EPG	 Guide / EPG / -/-
 3	 3	 Left	 Left
 4	 4	 OK	 OK
 5	 5	 Right	 Right
 6	 6	 Menu	 Menu / Home
 7	 7	 Down	 Down
 8	 8	 Exit	 Exit / Cancel / Clear
 9	 9	 Info	 Info / Angle
 Audio	 Audio / Lang I/II	 V-Format	 Picture / Format
 0	 0	 Recall	 Back / Return





	Original	Sustituto	Original	Sustituto
	Zoom	 Zoom / Size		
	Red	 Red / Netflix / Search		
	Green	 Green / APP / Repeat		
	Yellow	 Yellow / YouTube / Repeat		
	Blue	 Blue / Prime Video / Random		
	◀◀ FB	 << / Tune-		
	▶▶ FF	 >> / Tune+		
	◀◀ REV Slow	 Shift + << /		
	▶▶ Slow	 Shift + >> /		
	● Record	 Rec / Rec Mode		
	▶ Play	 Play / Slow		
	Pause	 Pause / Step / Freeze		
	■ Stop	 Stop / Hold		
	Find	 Shift + Red / Netflix /		
	Subtitle	 Subtitle / EQ		
	Sleep	 Sleep / Timer		
	Text	 Text / Goto		

