















 
 

 

 




 


Original	Sustituto
 Standby	 Power
 Tv/Radio	 TV/R
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Goto	 Smart
 Favourite	 Pre Ch
 Menu	 Menu
 Info	 Info

Original	Sustituto
 Recall	 Back
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 CH+	 Ch +
 CH-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 EPG	 Guide
 Subtitle	 Subt
 Audio	 Dual
 TTX	 Text
 <<	 <<
 >>	 >>





Original	Sustituto	Original	Sustituto
   I<<	   I<<		
   >>I	   >>I		
   Play	   Play		
   Pause	   Pause		
   Stop	   Stop		
   Rec	   Rec		
   Repeat	 +    Shift + Text		
   Page+	 +    Shift + Ch +		
   Page-	 +    Shift + Ch -		
   PVR	   Media		
   Red/USB	   Red		
   Green/V-Format	   Green		
   Yellow/Aspect	   Yellow		
   Blue/Timer	   Blue		